CL920 Tablet PC Features • Fonctions • Funktionen • Características • Recursos

1 Speaker
2 Web camera
3 Web camera light
4 Microphones
5 Volume buttons
6 Touchscreen display
7 Windows button
8 Ambient light sensor
9 Battery charge indicator lights
10 Documentation camera
11 Dock connector
12 Pen storage drawer
13 Pen release button
14 Pen tether attach point
15 Power button
16 Fan vent
17 Security button
18 Battery gauge button
19 SD HC card slot
20 SIM card slot
21 Micro HDMI port
22 Audio in/out jack
23 USB port
24 Power adapter port

1 Haut-parleur
2 Webcam
3 Flash de l'appareil photo de webcam
4 Microphones
5 Boutons de volume
6 Écran tactile
7 Bouton Windows
8 Capteur de lumière ambiante
9 Voyants de charge de la batterie
10 Appareil photo de documentation
11 Connecteur d'ancrage
12 Étui de rangement du stylet
13 Bouton de libération du stylet
14 Point d'attache du lien du stylet
15 Bouton d'alimentation
16 Fente du ventilateur
17 Bouton de sécurité Windows
18 Bouton de jauge de la batterie
19 Fente pour carte SD HC
20 Fente pour carte SIM
21 Port Micro HDMI
22 Prise jack d'entrée/sortie audio
23 Port USB
24 Adaptateur secteur

1 Lautsprecher
2 Webkamera
3 Webkamera-skameraleute
4 Mikrofone
5 Lautstärketasten
6 Touchscreen-Anzeige
7 Windows-Starttaste
8 Umgebungslichtsensor
9 Akkuladungsstatus-LEDs
10 Dokumentationskamera
11 Dock-Anschluss
12 Stift-Aufbewahrungsfach
13 Freigabeknopf für die Stifthaltevorrichtung
14 Befestigung der Stift-Haltevorrichtung
15 Netzschalter
16 Lüftung
17 Taste "Windows-Sicherheit"
18 Akkuanzeige-Taste
19 SD HC-Kartensteckplatz
20 Steckplatz für SIM-Karte
21 Micro HDMI-Anschluss
22 Audio In/Out-Buchse
23 USB-Anschluss
24 Netzadapter

1 Altavoz
2 Cámara Web
3 Luz de cámara de web
4 Micrófonos
5 Botones de volumen
6 Pantalla táctil
7 Botón de Windows
8 Sensor de luz ambiental
9 Luces del indicador de carga de la batería
10 Cámara de documentación
11 Conector de base
12 Compartimento de almacenamiento del lápiz
13 Botón de extracción del lápiz
14 Punto de unión del cordón del lápiz
15 Botón de encendido
16 Orificio de ventilación
17 Botón de seguridad de Windows
18 Botón de indicador de batería
19 Ranura para tarjetas SD HC
20 Ranura para tarjetas SIM
21 Puerto micro HDMI
22 Conector de entrada y salida de audio
23 Puerto USB
24 Adaptador de alimentación

1 Alto-falante
2 Web camera
3 Luz da câmera de web
4 Alto-falante
5 Botões de volume
6 Tela sensível ao toque
7 Botão do Windows
8 Sensor de luz ambiente
9 Luzes indicadoras de carga da bateria
10 Câmera de documentação
11 Conector Dock
12 Compartimento de armazenamento da caneta
13 Botão de liberação da caneta
14 Ponto de fixação da correia da caneta
15 Botão de energia
16 Saída da ventoinha
17 Botão de segurança do Windows
18 Botão do indicador de bateria
19 Slot do cartão SD HC
20 Slot do cartão SIM
21 Porta micro HDMI
22 Porta de entrada/saída de áudio
23 Porta USB
24 Adaptador de energia

User documentation: http://www.motioncomputing.com/us/support/userdocs

Documentation utilisateur : http://www.motioncomputing.com/fr/support/userdocs

Benutzerdokumentation: http://www.motioncomputing.com/de/support/userdocs

Documentación del usuario: http://www.motioncomputing.com/es/support/userdocs

Documentação do usuário: http://www.motioncomputing.com/pt/support/userdocs

Getting Started with the Motion® CL920 Tablet PC

Power on and off

Press the power button at the top left side of the CL920 Tablet PC.

You can shut down your CL920 from Windows®. Open the Start menu and then tap **Shut down**. If Windows doesn't respond, you can force the Tablet PC to shut down by pressing the power button for about five seconds.

Sleep

Place your CL920 in Sleep mode when you go away for a short period of time to conserve battery power. When you return, the Tablet PC quickly resumes activity and your desktop is the same as you left it.

To put the Tablet PC in Sleep mode, press and release the power button. To wake up the tablet from Sleep mode, press the power button again.

Note The power button blinks when the tablet is in Sleep mode.

Locking and unlocking

To lock and unlock your CL920, press the Security button on the left side of the Tablet PC.

Using the pen

An important difference between traditional PCs and Tablet PCs is that you frequently use a digitizer pen instead of a mouse and keyboard. The CL920 pen has a pressure-sensitive tip and a function button. Pressing the function button is equivalent to right-clicking a mouse.

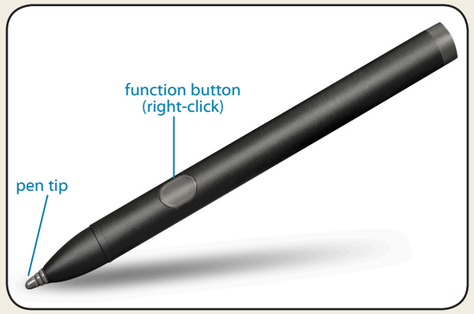

Using touch

Your CL920 is equipped with 10-finger touch, which means you can use your fingers to select items and open files, zoom in and out, scroll through browser windows and documents, and more.

Touch works like a mouse. Tap to select an item and double-tap to open it.

Tip To open a right-click menu using touch, press your finger on the display until a circle appears, then lift your finger and the shortcut menu appears.

If you find that the touchscreen doesn't respond as you expect, or if the tablet starts to respond to unintentional touch input, you can fine-tune touch by resetting the touch system to its optimal state. To start the application, open Motion Dashboard, tap **Pen & Tablet**, and then tap **Touch Settings**.

Checking battery power

You can check the remaining battery power in your CL920 by:

- Open Motion Dashboard, tap **Power** and viewing the value under **Remaining charge**.

  OR

- From the Windows Notification area, tap the power indicator, which changes appearance depending on whether the Tablet PC is plugged in or running on battery.
  - If the Tablet PC is plugged in, tap the plug icon.
  - If the Tablet PC is on battery power, tap the battery icon.

The five lights on the left front of the Tablet PC also indicate the battery's current level of charge—from one green light (≤ 20% charged) to five green lights (81%-100% charged). Press the battery gauge button on the left side of the Tablet PC to view the remaining charge level.

When the tablet is plugged in, the battery gauge button lights up.

Green indicates that the battery is fully charged.
Amber indicates that the battery is charging.

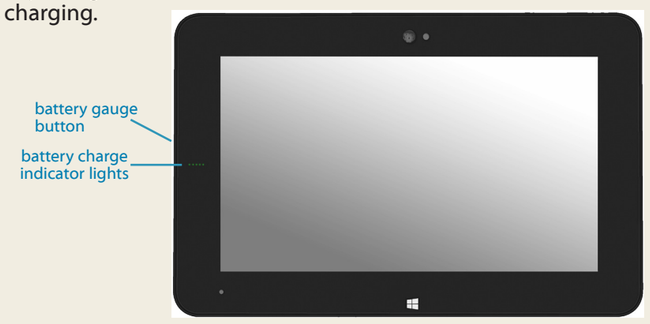

Battery tips

- Use AC power when available. When the CL920 is plugged in, the battery charges while in use.
- Put your Tablet PC in Sleep mode when you're not using it.
- Stop unnecessary background applications and processes.
- When not in use, disable wireless adapters using the Motion Dashboard **Wireless** settings.
- Set the brightness of the display to automatically dim after a selected number of minutes of inactivity using the Motion Dashboard **Display** settings.
- When using mobile broadband, reduce how often the CL920 updates email and other Internet applications to once every half hour or longer.
- Disable mobile broadband when you know a signal is unavailable.
- Condition your battery once a month. To condition it, run the Tablet PC on battery power until the battery's charge level drops below 20%.

Enter text with the input panel or on-screen keyboard

You can use different methods to enter text with your CL920 to fit your needs. You can enter text either by writing on a virtual note pad (called the writing pad) or by tapping characters on the on-screen keyboard.

To open the input panel, either:

- Tap in the place where you want to enter text, such as in a text box. Then tap the input pane icon.



OR

- Tap the input panel tab on the left edge of the screen.

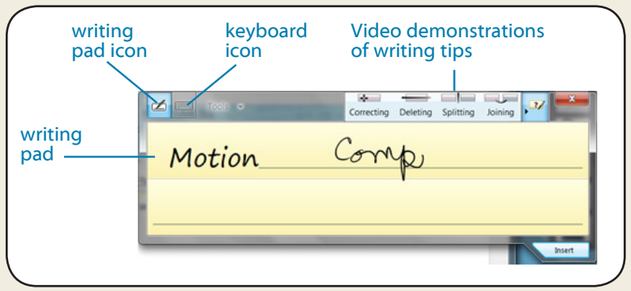

Tip Use the handwriting recognition application to train the CL920 to recognize your handwriting style. To start the application, open Motion Dashboard, tap **Pen & Tablet,** tap **Pen & Input Devices**, and then tap the **Handwriting** tab.

Tap the keyboard icon on the input panel to open the on-screen keyboard.

Tip You can resize the keyboard panel by dragging the handle at the bottom right of the keyboard.

Set up wireless

The CL920 includes built-in Wi-Fi® and Bluetooth®. Your Tablet PC may also be equipped with mobile broadband. To set up available wireless networks, follow these steps:

Step 1. Enable Wireless from Motion Dashboard

1. From the taskbar, tap the Dashboard icon.
2. Tap **Wireless**.
3. Enable the desired available wireless networks:
   - **Bluetooth Internal Wireless**
   - **802.11 Internal Wireless**
   - **Mobile Broadband with GPS**

Tip If mobile broadband isn't listed, your CL920 isn't equipped with a mobile broadband module.

Step 2. Set up Bluetooth

Your CL920 has a built-in Bluetooth adapter to connect to other Bluetooth-enabled devices.

To add a Bluetooth device:

1. From the notification area, tap the Bluetooth icon and select **Add a Device**.
2. Make sure the Bluetooth device is discoverable according to the device manufacturer's instructions. When a Bluetooth device is discoverable, it's visible to other Bluetooth devices within range.
3. Select the desired Bluetooth device from the list of devices.
4. Follow the on-screen instructions.

Tip To make the CL920 visible to other devices, tap the **Bluetooth** icon then select **Open settings**. On the **Options** tab, select **Allow Bluetooth devices to connect to this computer**.

Step 3. Set up Wi-Fi

1. From the Windows notification area, tap the wireless network icon.
2. Select a wireless network from the list of available networks.

Step 4. Set up Mobile Broadband with GPS (optional)

If you purchased your CL920 with the optional mobile broadband module, you can connect to high-speed cellular networks worldwide. With the mobile broadband module and a data plan from one of several cellular network providers, you have full Internet access.

Note Before you can connect to a mobile broaband network, you must have an active account with a cellular network provider and obtain a SIM card for mobile broadband access.

To set up mobile broadband:

1. Start Skylight. From the Start menu, select **All Programs > Sierra Wireless > Skylight > Skylight**.
2. Tap the connect button to connect to your wireless networks.

Note If you purchased your CL920 with the optional Mobile broadband with GPS module or the optional discrete GPS module, your tablet has GPS capabilities. You can use GPS with your preferred mapping application to find your current and destination locations. Please refer to the *User's Guide* for additional information.

Motion Dashboard

Motion Dashboard provides a convenient way to change common tablet-related settings.

To open Motion Dashboard:

- Tap the Motion Dashboard icon in the Windows taskbar.

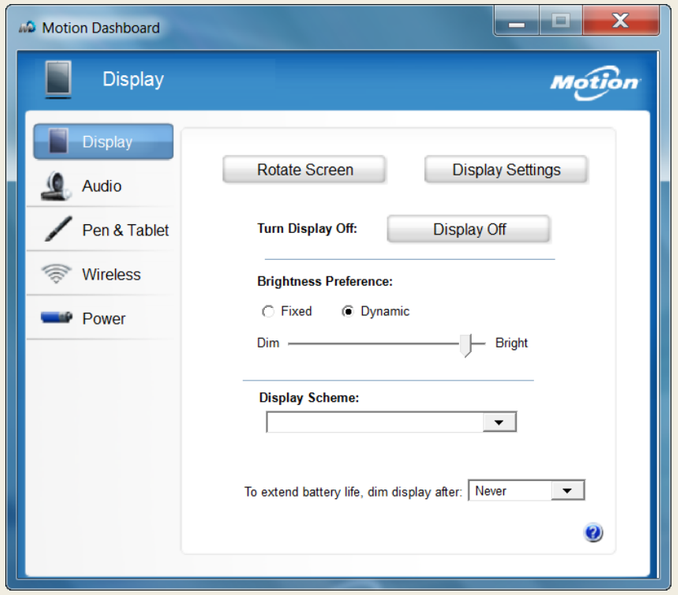

The following table lists some of the tasks you can perform using the Motion Dashboard.

Category	Task
Display	Rotate the display orientation
	Adjust the brightness of the display
	Set up an external display
Audio	Adjust speaker and microphone volume
	Suppress background noise
Pen & Tablet	Configure touch to use your finger only, pen only, or both your finger and a pen
	Configure front panel buttons
	Configure tablet for left-handed use
Wireless	Enable and disable Wi-Fi®, Bluetooth®, and mobile broadband
	Choose to have wireless disabled when the system starts up
Power	Change what the power button does when pressed: Sleep, Hibernate, or shut down

Using the documentation camera

Your CL920 is equipped with an integrated 5MP auto-focus camera (image capture is limited to 3MP). You can use the camera to take pictures and save them on the Tablet PC. The camera lens is on the back of the tablet.

To take a photograph:

1. Tap the camera icon on the Windows taskbar to activate Motion SnapWorks.
2. Hold the camera steady and point the lens at the object.
3. Press the camera icon to take the picture.

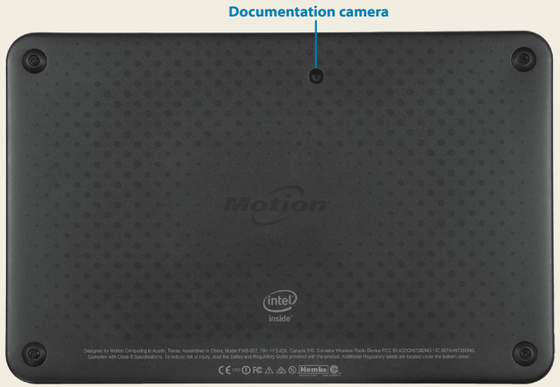

Using the web camera

Your CL920 has a 1.3MP web camera that supports color images and streaming video. The web camera is located on the front of the Tablet PC in the top center area.

If you'd like to use Skype™ with your web camera, from the Start menu, select **All Programs > Skype > Skype**.

To start the web camera:

Follow the on-screen instructions for using the web camera software of your choice.

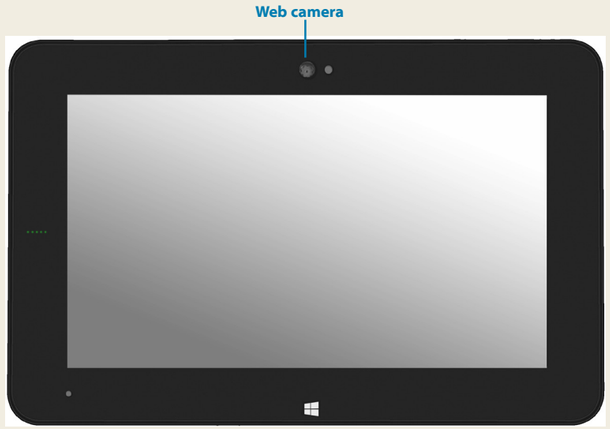

Tips

Make the most of your CL920 by following these tips.

Pen and Touch tips

- You can change from right- to left-handed use. From Motion Dashboard **Pen & Tablet** category, tap **Tablet PC Settings**, tap the **Other** tab, then tap **Left-handed**.
- You can open items with one tap (instead of two) and select an item by pointing to it. From the Control Panel, tap **Folder Options**, then tap **Single-click to open an item (point to select)**.

General tips

- Use only the CL920 digitizer pen or your finger on the display. The Tablet PC doesn't respond to any other type of pen or stylus.
- When attaching the pen tether, slip one end of the tether through the hole at the end of the pen and pull the pen through the loop until it's tight. Then slip the other end of the tether through the attach point and pull the pen through the loop until it's tight.
- Store the pen in the pen storage bay when not in use. To store the pen, press the pen release button and insert it into the pen storage bay, tip down. To remove the pen, press the pen release button and pull the pen upward and out from the storage bay.
- Clean fingerprints and smudges from the display surface by wiping it with the display cloth provided.
- You can find the serial number of your CL920 from the Start menu. Select **Computer**, right-click, and select **Properties**. The serial number is displayed next to the model number.

Caution • Attention • Achtung • Precaución • Precaución

- Read the Safety and Regulatory Guide before starting the tablet.
- Veuillez lire le *Guide des conseils de sécurité et réglementations* avant de démarrer la tablette.
- Lesen Sie vor Inbetriebnahme des Tablet PC das *Sicherheits- und Vorschriftshandbuch*.
- Lea la *Guía de seguridad y normativa* antes de empezar a utilizar el tablet.
- Leia o *Guia Regulatório e de Segurança* antes de ligar o tablet.

Learn more

To get more detailed information on your Tablet PC, go to the *CL920 User's Guide,* which is available here: **http://www.motioncomputing.com/us/support/userdocs**.

In addition to our documentation, you can get the following information from our website:

- **Motion Support**
- **Motion Knowledge Base**
- **Free online training videos**
- **CL920 accessories**
- **Software for the CL920 Tablet PC**

For more accessories, go to http://www.motioncomputing.com/us/products/rugged-tablets/CL920#accessories

Pour davantage d'accessoires, rendez-vous sur http://www.motioncomputing.com/fr/products/rugged-tablets/CL920#prod_acc
Weitere Informationen zum Zubehör erhalten Sie hier http://www.motioncomputing.com/de/products/rugged-tablets/CL920#prod_acc
Para obtener más información sobre accesorios, visite http://www.motioncomputing.com/es/products/rugged-tablets/CL920#prod_acc
Para obter mais informações sobre acessórios, acesse http://www.motioncomputing.com/pt/products/rugged-tablets/CL920#prod_acc

Copyright © 2014 Motion Computing, Inc. All rights reserved. Motion Computing and Motion are registered trademarks of Motion Computing, Inc. in the United States and other countries. All other trademarks are properties of their respective owners. Microsoft, Windows, and Windows Journal are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

PN 024-02-0485-A01